



ALARM.COM®

# Alarm.com Wireless Video Doorbell

ADC-VDB780B  
DATA SHEET

## Key features

- Completely wireless installation
- Rechargeable (micro USB) battery pack
- Optimized for battery life that is expected to last up to six months
- Advanced motion detection provides increased awareness with timely alerts
- Two-Way Audio through the mobile app
- Installation flexibility for optimal viewing
- 160° horizontal FOV
- Full HD 1080p recording
- Wi-Fi connection to the Alarm.com Smart Chime (ADC-W115C) or Smart Gateway (ADC-SG130) (sold separately) required



## Overview

The Alarm.com Wireless Video Doorbell is a battery-powered doorbell camera that features HD video, Video Analytics for rapid people detection, Two-Way Audio, a wide field of view, and a rechargeable battery.

This completely wireless video doorbell gives you the flexibility to choose the perfect installation location without depending on the existing wiring or chime. The VDB780B must be connected over Wi-Fi to the Alarm.com Smart Chime (ADC-W115C).

# Specifications

**Recording compression:** H.264

**Ingress protection:** IP66

**Max resolution:** 1920x1080

**Image sensor:**  
2.12 MP - 1080p, Sony IMX323 ABR control support and MJPEG

**Lens/angle of view:**  
160° horizontal, 90° vertical, 175° diagonal

**Low-light sensitivity:**  
0.5 lux with IR LED off IR range:  
Up to 15 feet (5 meters)

**Image adjustments:**  
Flip, brightness, contrast, saturation, sharpness, exposure

**Wi-Fi connectivity:** 802.11 b/g/n, 2.4 GHz

**Operating and storage temperatures:**  
-4°F to 122°F (-20°C to 50°C)

**Operating humidity:**  
20% to 100% (non-condensing)

**Dimensions:**  
(W x L x D) 2.5 x 5.3 x 1.2"  
(64 x 134 x 30 mm); mounting bracket adds 0.2" (6 mm) to depth

**Motion sensor:** Passive infrared sensor

**Battery pack capacity:**  
9540mAh nominal capacity

**Charging requirement:** 5V/1.5A charger

**Charging time:** Up to 7 hours

**Speaker:** 1W, 8Ω speaker

**Microphone:** Single, omni-directional, analog, >-40dBV/Pa

# Included accessories

- Charging cable
- Mounting plate
- Mounting screws and anchors
- Installation guide
- 10° tilt wedge

# LED guide

- 1 Top LED
- 2 Button LED



Charging States			
Mode	Description	Top LED Behavior	Button LED Behavior
Charging	The battery pack is plugged in and charging.	Solid orange 	<b>On Button Press</b> Solid green = >75% charged  Solid orange = 75% -15% charged  Alternating red and blue = <15% charged 
Fully charged	The battery pack is fully charged.	Solid green 	<b>On button press, Solid green</b> 
Failure charging	Remove the charging cable and re-attempt charging after an hour. If you see the same behavior, please contact your provider.	Alternating orange and green 	Alternating red and white 
Under temperature	The battery pack's internal temperature is too cold. Please charge the battery pack in a room temperature setting.	Solid green 	Alternating yellow and red 
Over temperature	The battery pack's internal temperature is too hot. Please charge the battery pack in a room temperature setting.	Solid green 	Blinking red rapidly 
Operational States			
Mode	Description	Button LED Behavior	
Standby or off	The camera is in standby mode (normal operation) or the battery is drained and requires recharging.	Off 	
Local connection	The camera has a local network connection.	Solid green 	
No local connection	The camera does not have a local network connection.	Solid red 	
Low battery	The camera's battery is low and requires a recharge.	Alternating red and blue 	
Connecting to network	The camera is powered on and connecting to a network.	Blinking red 	
WPS mode	The camera is in WPS pairing mode. To enter this mode, press and hold the button for 30-45 seconds.	Blinking blue 	
AP mode	The camera is in AP pairing mode. To enter this mode, press and hold the button for 46-60 seconds.	Blinking white 	
Power cycle	The camera is being power cycled. To enter this mode, press and hold the button for 61-75 seconds.	Blinking yellow 	
Factory reset	The camera resetting to factory default. To enter this mode, press and hold the button for 76-180 seconds.	Alternating red and green 	
Firmware upgrade	The camera's firmware is being updated.	Blinking yellow rapidly 	